


CHECKING THE TRANSFER GEAR OIL LEVEL

1. Stand the motorcycle on a level surface.

NOTE:

- Place the motorcycle on a suitable stand.
- Make sure the motorcycle is upright.

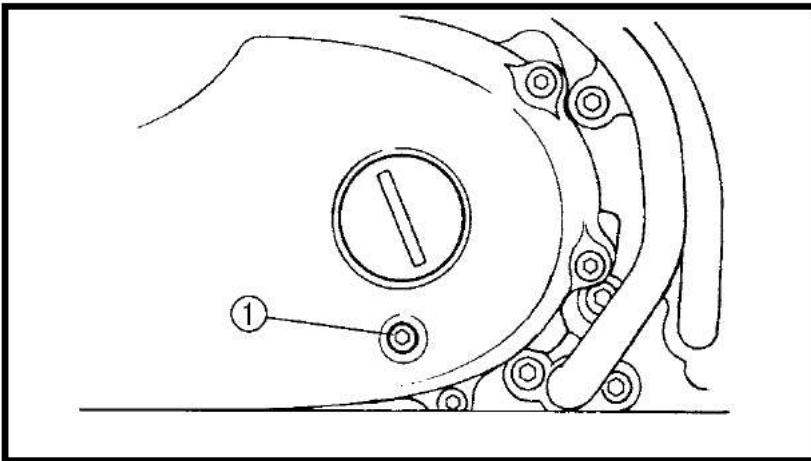

2. Remove:

- checking bolt ①

3. Check:

- transfer gear oil level

The transfer gear oil level should be up