

GENERAL MAINTENANCE AND LUBRICATION CHART



No.	ITEM	ROUTINE	TYPE	INITIAL	ODOMETER READINGS					
				600 mi (1,000 km) or 1 month	4,000 mi (7,000 km) or 6 months	8,000 mi (13,000 km) or 12 months	12,000 mi (19,000 km) or 18 months	16,000 mi (25,000 km) or 24 months	20,000 mi (31,000 km) or 30 months	
6	* Clutch (See page 3-28.)	<ul style="list-style-type: none"> • Check operation and free play. • Correct if necessary. 	—	√	√	√	√	√	√	
7	* Transfer case oil (See page 3-26.)	<ul style="list-style-type: none"> • Check vehicle for leakage. • Replace every 16,000 mi (25,000 km) or 24 months. 	SAE 80 API "GL-4" hypoid gear oil	Replace		Check		Replace		
8	* Control cable (See page 3-49.)	<ul style="list-style-type: none"> • Apply chain lube thoroughly. 	Yamaha chain and cable lube or SAE 10W30 motor oil	√	√	√	√	√	√	